


ITCM ECU Power, 2M/3M Valve and Wheel End Speed Sensor Connections

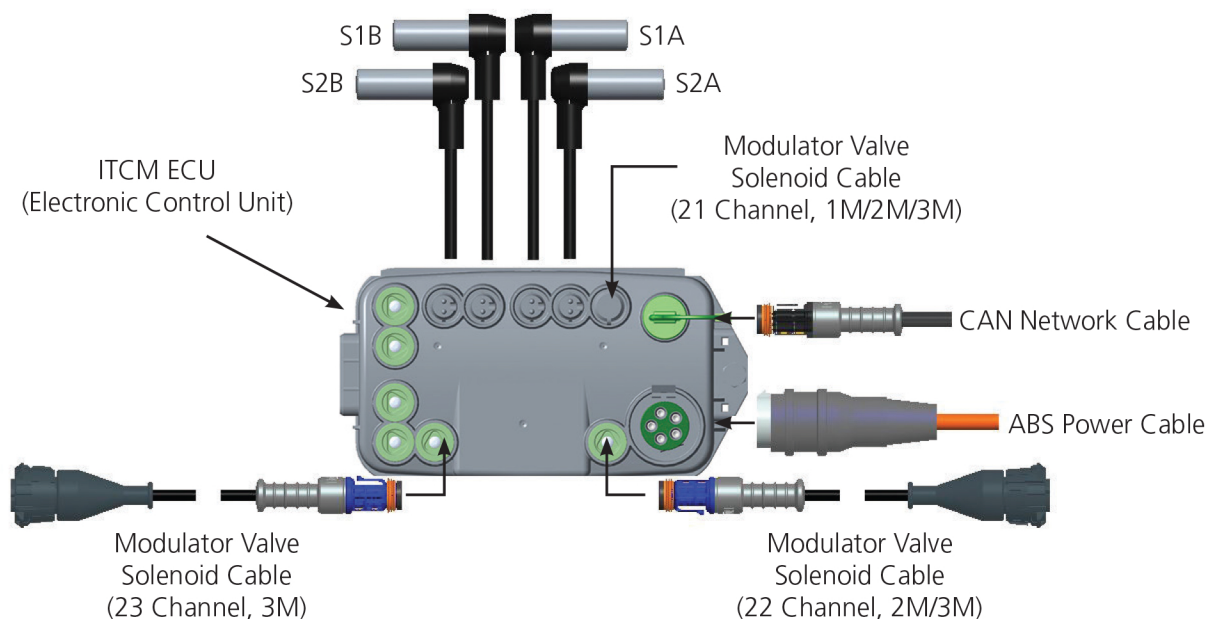

Note: If 2S/1M is desired, use Sensors (S1A and S1B). Use blanking plugs in un-used Sensor Connections.

Note: When installing and servicing always apply small amount of dielectric grease to all electrical connections.

Always ensure that ABS power cord is locked into place.

